


HOW TO USE THE JUNIOR

To raise the Junior, loosen the main brake(D) and lift the main work surface on the sides(E & E). After reaching the desired height, tighten the work surface brake. Loosen the monitor brake(A) and raise the monitor shelf(B) with one hand. After reaching the desired height tighten the monitor brake. Place the stabilization leg included with your unit, between the work surface and steel base plate.

To lower the Junior, remove the stabilization leg, loosen the main brake(D) and lean into the unit using your upper body weight pushing down with both hands on the horizontal bar at the rear of the main horizontal work surface (C & C). After the Work Surface is lowered, tighten the work surface brake(D) and loosen the monitor brake(A). Lower the monitor shelf to the desired height then tighten the monitor brake.

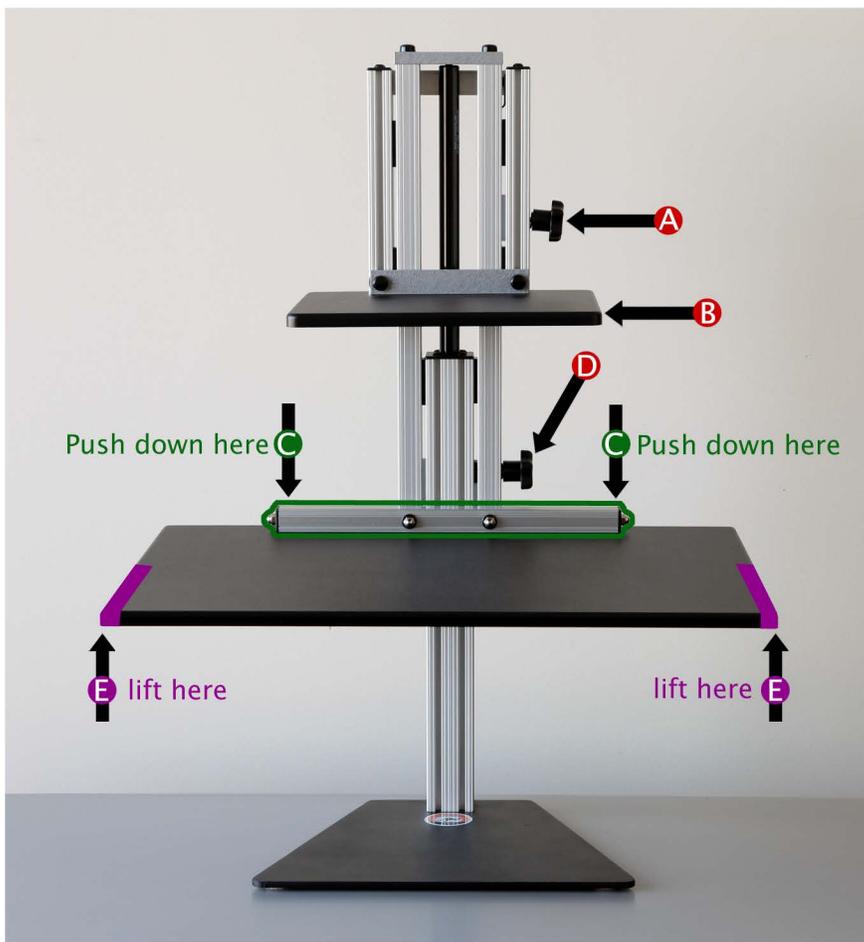

- A. Monitor Brake
- B. Monitor Shelf
- C. Work Surface Rail
- D. Main Brake
- E. Main Work Surface



optimal location for support leg


HOW TO ADJUST YOUR JUNIOR TO SUPPORT LAPTOP OR MONITOR

If you have selected the Monitor/Laptop selection when ordering your Kangaroo Junior, the Junior's monitor shelf will be preset at the Monitor height, please follow the instructions below to change the monitor shelf to support a laptop.

1. Bring the unit into the standing position.
2. Tighten the monitor brake(A), and remove the monitor from the shelf.
3. Go to the back of the unit and loosen the bolt attached to the top of the monitor spring by just 1/2 a turn.
4. Loosen the monitor brake and lift the monitor shelf to the desired height.
5. Tighten the monitor brake, then tighten the bolt attached to the monitor spring.



THE STABILIZATION LEG

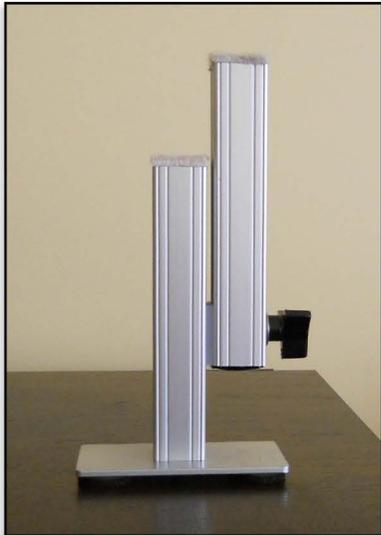

Your adjustable height desk unit comes with an adjustable leg that can be used to give you maximum stability when you are using “The Kangaroo” in the standing position.

Raise The Kangaroo work surface to your desired standing height and tighten the work surface brake.


Place the adjustable leg under the work surface and loosen the adjustable leg brake. Only loosen the brake by a turn or two, to much and the brake will disengage from the slot.

Extend the adjustable leg until it engages the bottom of the work surface and then tighten the adjustable leg brake.


The leg is shipped with the **extension section** installed to give you additional height adjustment. If this is too tall for your application, simply **unscrew the extension section**.

A Extension Selection

B screws into here

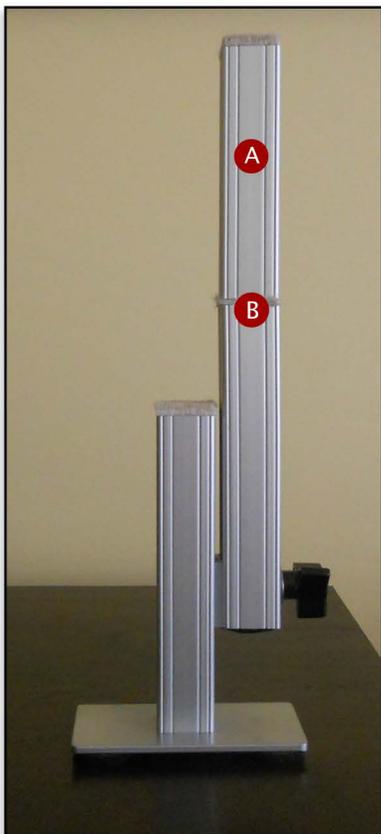

ALWAYS REMOVE LEG BRACE BEFORE LOWERING THE WORK SURFACE.

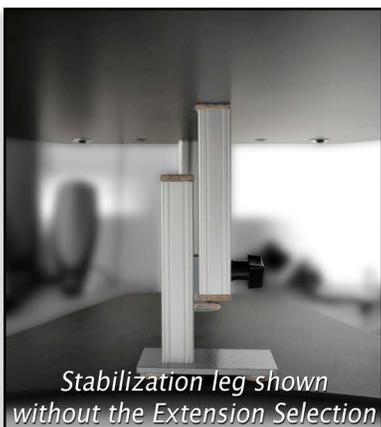

Stabilization leg shown without the Extension Selection

